
Foam Pad Hood (FPH) Dock Seal Installation Instructions

(Right or left — read from outside facing building)

- DETERMINE CENTERLINE OF DOOR OPENING ON DOCK FLOOR AND POSITION OF FPH HOOD OUTER EDGES: Take 1/2 of the hood width and mark this distance on both sides of the centerline of the door opening.
- ATTACH MOUNTING BRACKETS TO SIDE PADS: Attach three (3) pairs of brackets per pad using lag screws provided.
- MOUNT SIDE PADS TO WALL: Outside edge of side pads should be placed on mark with bottom of backing flush with dock floor. Be sure pads are plumb from top to bottom.
- **4. MOUNT 2X4 HEAD FRAME TO WALL:** Top of 2X4 placed 4" above top of door opening and flush with outside edge of side pads.

NOTE: Three (3) anchors recommended—one middle and one near each end.

- 5. INSERT STEEL TUBE IN HOOD
- 6. FASTEN HOOD TO HEAD FRAME AND OUTSIDE EDGE OF SIDE PADS: Galvanized roofing nails are provided and should be fastened approximately 6" apart.
- CAULK BETWEEN HEAD FRAME AND WALL:
 Outside edges only. A silicone or butyl rubber caulk is recommended.

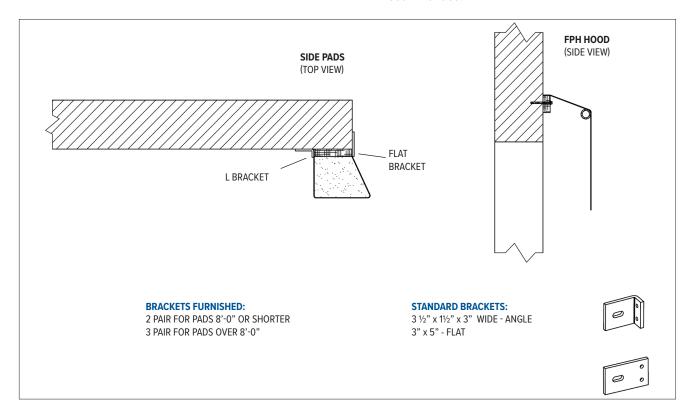

SUGGESTED MOUNTING METHODS

(Mounting anchors not included)


CONCRETE BLOCK OR BRICK WALL: Try to hit mortar joints. Use 1/2" or 3/8" x 4" expansion anchors. Use through bolt fastening (minimum 2 per frame member) if anchors will not hold—3/8" threaded rod is recommended.

PRECAST CONCRETE: Same as above.

METAL SKIN BUILDING: Through bolt fastening as above. Use a back-up plate (steel or wood) to support bolts, or anchor through existing building girt or purlin when possible.



FPH-SERIES TYPICAL ARRANGEMENT

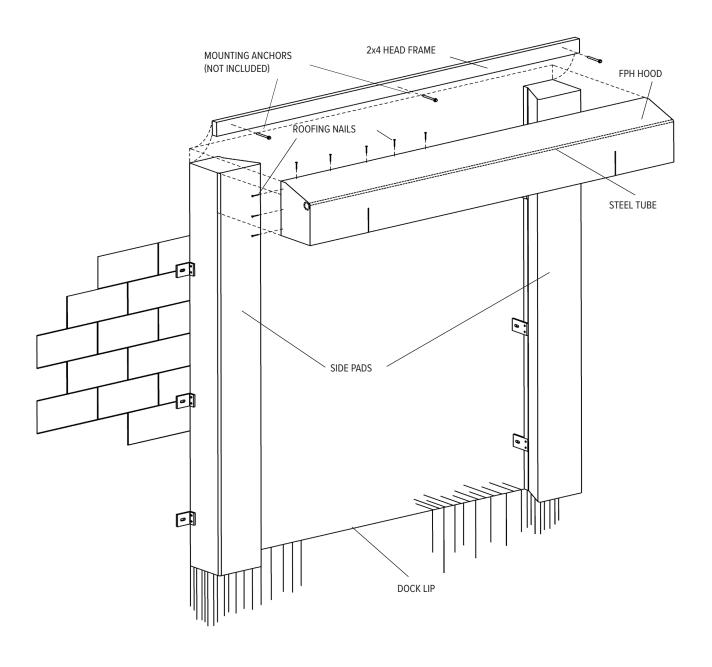

W194N11481 McCormick Dr. I Germantown, WI 53022 wbmcguire.com I sales@wbmcguire.com 800-624-8473

Let McGuire help you find the best solution for your operation.



